


**MW/LW/FM/AIR MARINE BAND RADIO**  
**Model SAB9**



**INSTRUCTION MANUAL**



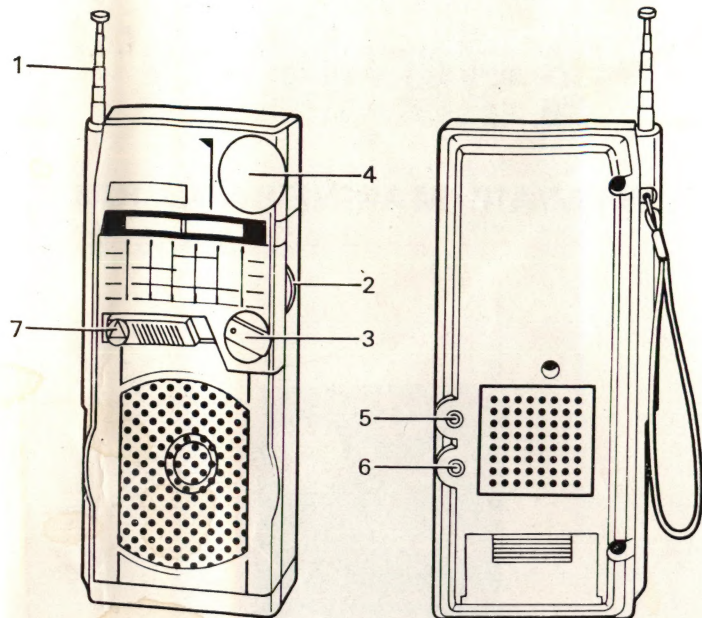

1. Telescopic aerial
2. Fine Tuning
3. ON/OFF knob  
Volume control

4. Tuning knob
5. D.C. socket
6. Headphone socket
7. Function knob

### OPERATION

REMOVE THE BATTERY COMPARTMENT COVER AND INSERT 4 X 1.5V BATTERIES. MAKE SURE THAT THE BATTERIES ARE INSERTED CORRECTLY, OBSERVING THE CORRECT POLARITY, AS OTHERWISE THE RADIO MAY BE DAMAGED.

**NOTE:** WEAK OR DEAD BATTERIES MAY LEAK AND DAMAGE THE RADIO. ALWAYS REMOVE THE BATTERIES WHEN THE RADIO IS NOT TO BE USED FOR LONG PERIODS OF TIME.

### VOLUME CONTROL —ON/OFF KNOB

SWITCH ON OR OFF BY USING THE ON/OFF + VOLUME CONTROL KNOB. WHEN SWITCHING OFF — TURN THE KNOB IN AN ANTI-CLOCKWISE DIRECTION — YOU WILL HEAR A 'CLICK' WHEN THE RADIO IS FULLY TURNED OFF.

### TELESCOPIC AERIAL

BEST RECEPTION IS OBTAINED WITH THE AERIAL FULLY EXTENDED. WHEN RECEIVING STRONG TRANSMISSIONS IT MAY BE NECESSARY TO SHORTEN THE AERIAL SLIGHTLY IN ORDER TO ELIMINATE INTERFERENCE.

### TUNING

YOUR RADIO CAN RECEIVE **MW/LW/FM/AIR/MARINE** BAND FREQUENCIES. BY TURNING THE TUNING KNOB YOU CAN REACH THE DESIRED FREQUENCY RANGE AND BY TURNING THE VOLUME CONTROL KNOB, THE DESIRED VOLUME.

### FINE TUNING

USE THIS CONTROL FOR MORE PRECISE TUNING ON AIRBAND

### EARPHONE SOCKET

BY INSERTING THE EARPHONE INTO THE SOCKET THE BUILT-IN SPEAKER IS AUTOMATICALLY SWITCHED OFF.

### NOTE:

KEEP THE RADIO AWAY FROM HEAT (RADIATORS, WINDOWS HEATED BY THE SUN, HEAT INSIDE A CAR BOOT, ETC). REMOVE THE BATTERIES WHEN THE RADIO IS NOT IN USE.